

How to reconnect Omni WiFi 6 nodes



OMNI WiFi 6
AX3000 WiFi 6 Mesh System

 


OMNI WiFi 6 lite
AX1500 WiFi 6 Mesh System

How to reconnect WiFi 6/Omni WiFi 6 lite nodes

If any of your Omni WiFi 6/lite nodes are not connected to the main node, you can easily add them by following these instructions.

If an Omni WiFi 6 node is not connected, you will see that the LED light is either blinking green or is solid red.
You will also only see the main node in the Jensen WiFi app.

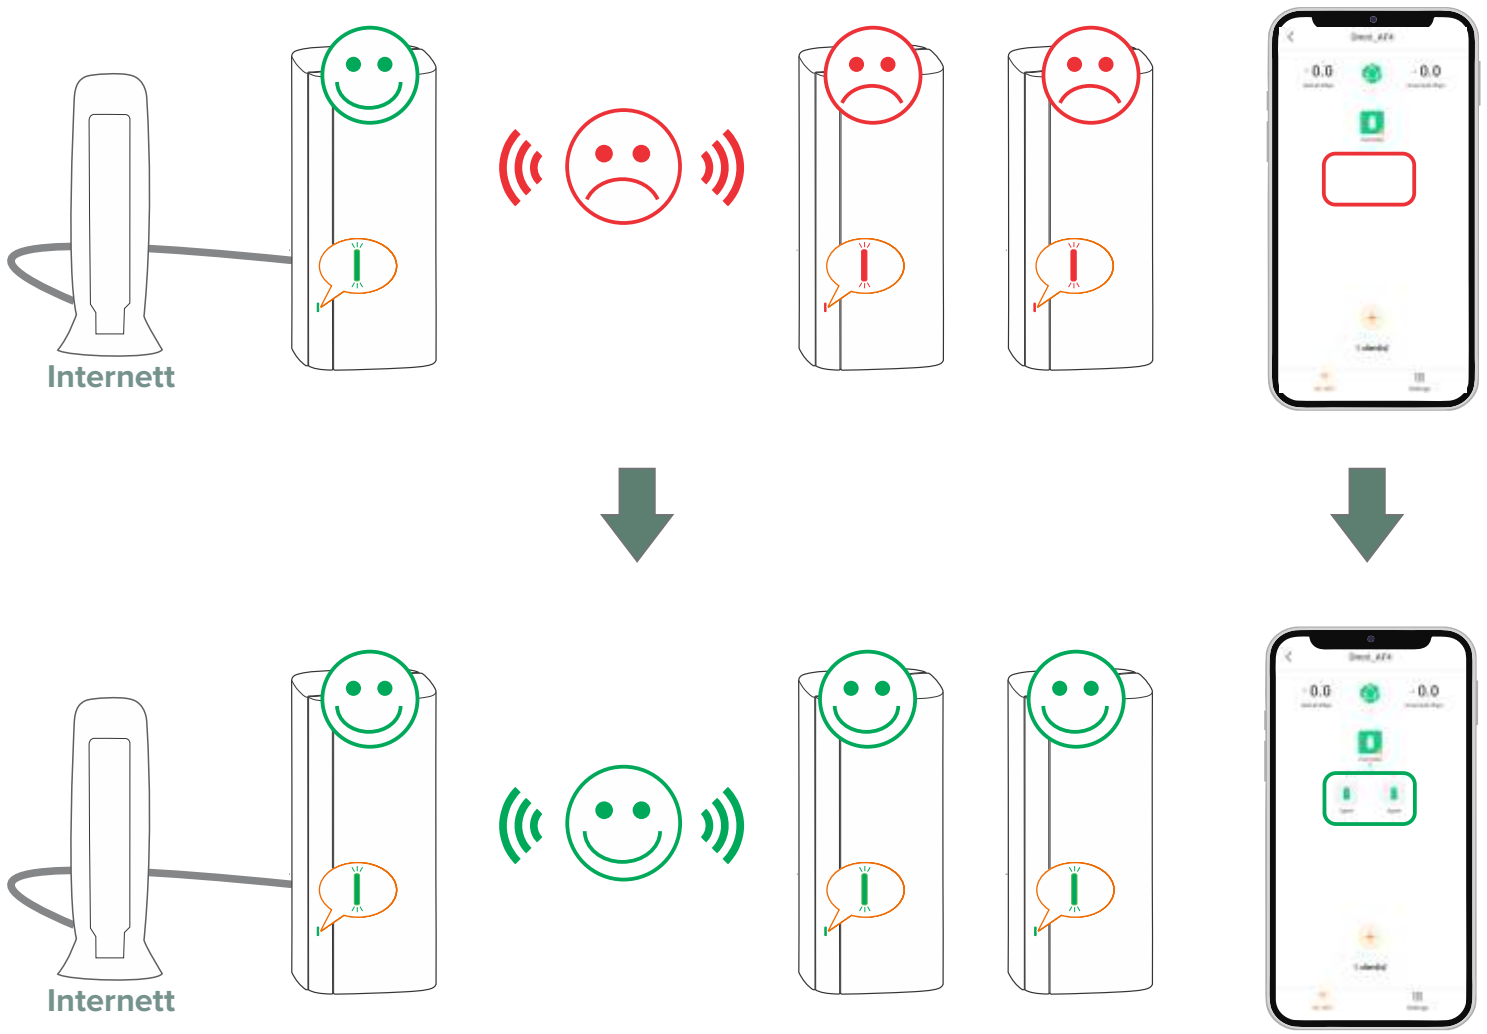


See next page for step 1 

Step 1 - Resetting the Omni node you want to add


1 - Connect the power supply to the Omni WiFi 6 (lite) node and wait for 1 minute before proceeding.

2 - Press and hold the MESH button until the LED light flashes red, then release.

 Repeat steps 1 and 2 for all Omni WiFi 6 (lite) nodes you wish to add.

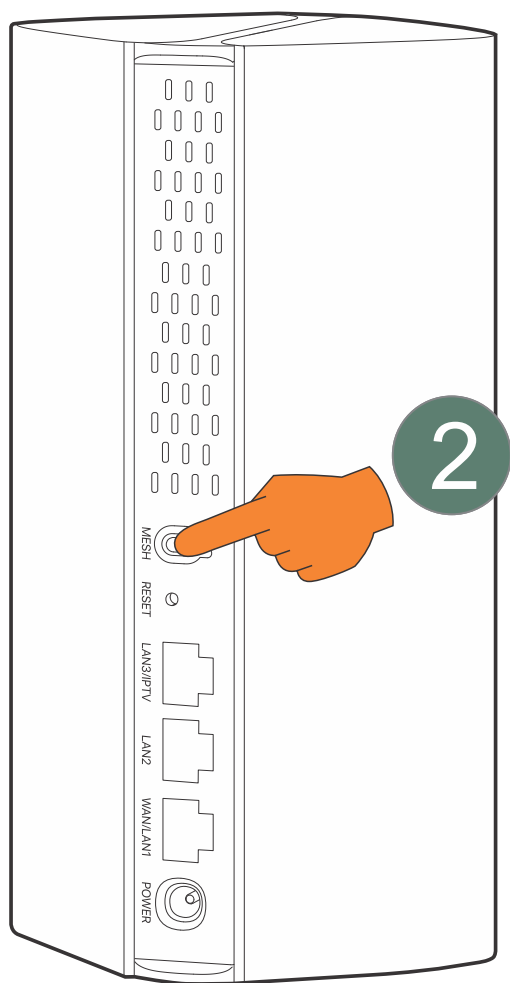

Omni WiFi 6

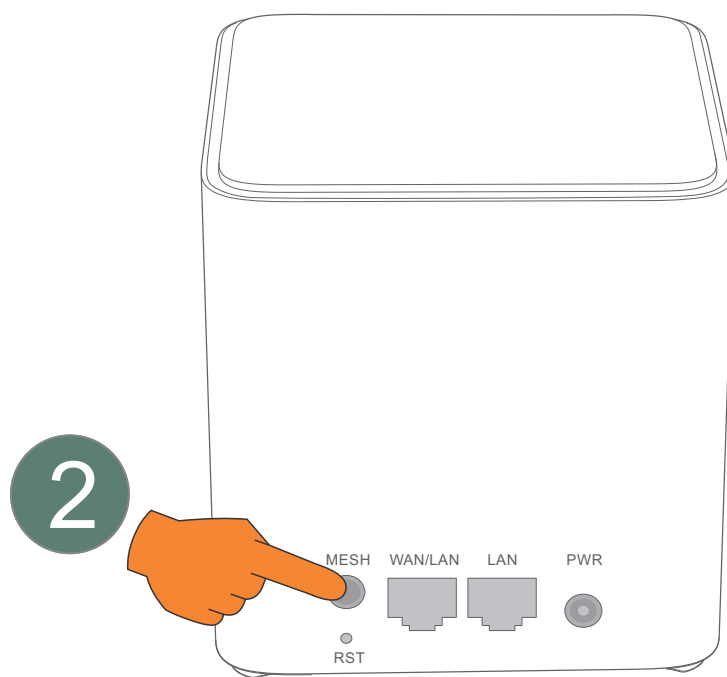 


Omni WiFi 6 lite

See next page for step 2 

Step 2 - Pairing the node

 1. Ensure that the Omni WiFi 6 (lite) node is powered on and either blinking green or solid red before proceeding to step 2.
2. Press and hold the MESH button on the new node you want to add for 1 second.
**** The LED light should now blink rapidly. ****
3. Press and hold the MESH button on the main Omni node for 1 second.
**** The LED light on the main Omni node should now blink rapidly ****

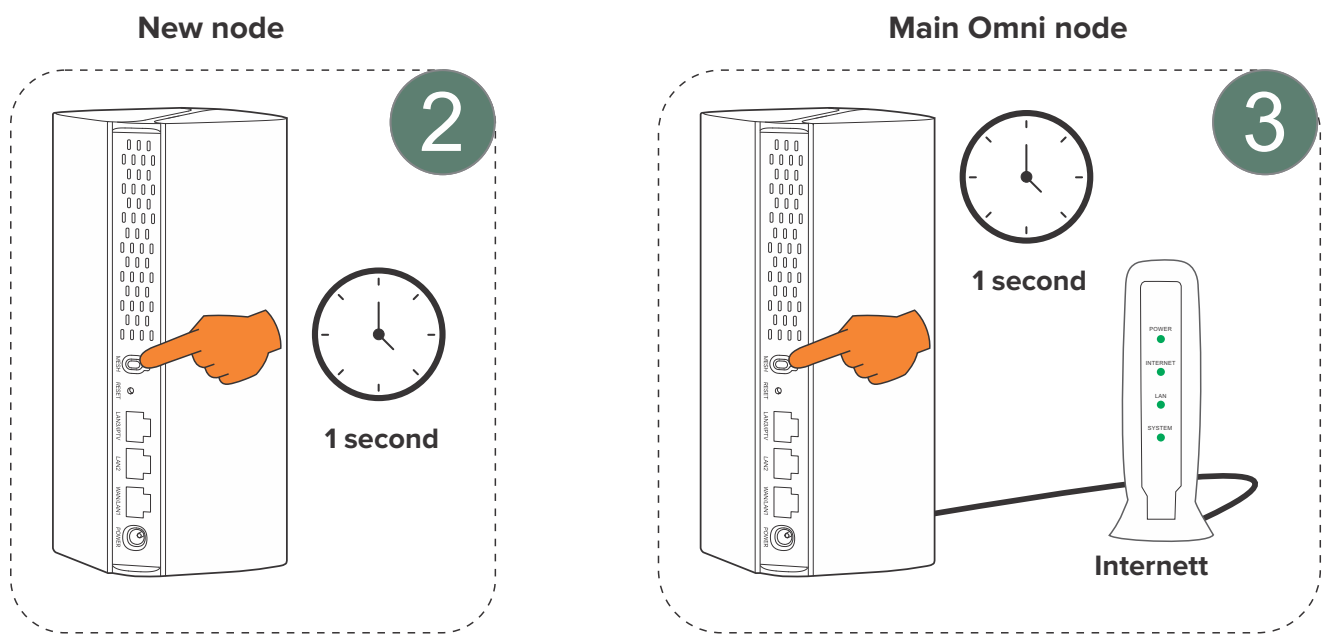

4. After approximately 2 minutes, the node will have connected to the main Omni node. The LED light should now be solid green, and you should be able to see that the Omni node has been added to the Jensen WiFi app.

Repeat steps 1-4 until you have added all nodes.



OMNI WiFi 6

WiFi 6 Mesh System

Jensen[®]
OF SCANDINAVIA

CBK Distribusjon AS
Gneisveien 30
2020 Skedsmokorset
Norway

www.Jensenscandinavia.com