

RADIO BUDDY DAB

 
Jensen®
OF SCANDINAVIA

 


HURTIGGUIDE




QUICK GUIDE

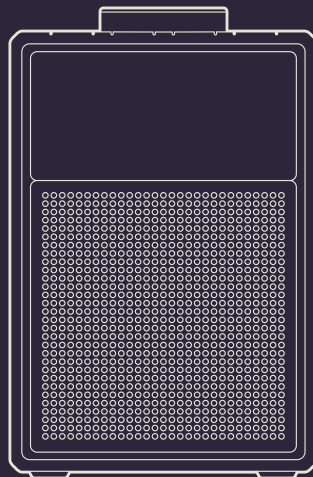



 TAKK FOR AT DU VALGTE
JENSEN OF SCANDINAVIA

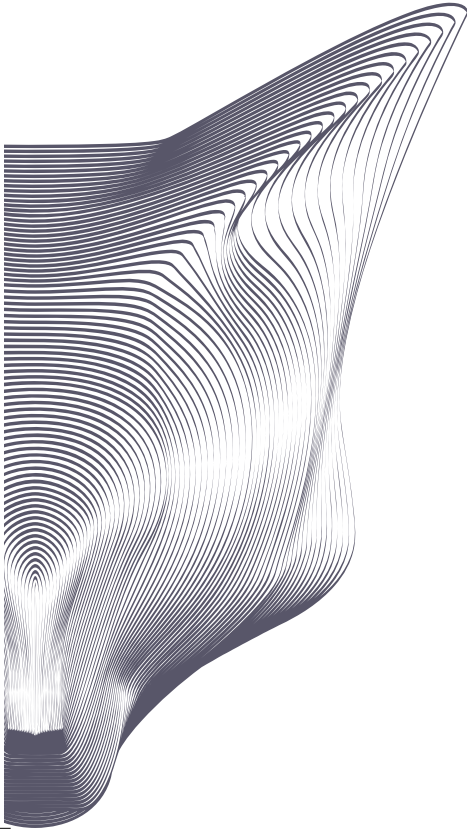


I Jensen of Scandinavia vet vi at fornøyde kunder betyr alt. Derfor søker vi konstant etter kunnskap for å kunne oppfylle kundenes behov og ønsker.

Vi gjør alt for å være førstevalget, best på kundeservice og at våre produkter er enkle å bruke.

Vi håper du blir fornøyd med din nye BUDDY DAB radio.

 Vennlig hilsen
Jensen of Scandinavia



Innhold

Kom i gang	7
DAB-Radio	9
FM-Radio	12
Bluetooth	15
Music-in	17
Alarm	19
Systemmeny	22
Litt info	25
Om batteriet	27
Sikkerhet	28

 
Kom i gang

Monter medfølgende strømadapter og koble strømledningen i radioen.
Trekk antennen helt ut og trykk på  i 2 sekunder for å slå på BUDDY DAB.

Velg ønsket språk med  og trykk på .

Radioen vil nå automatisk søke etter tilgjengelige radiokanaler.

Juster antennens posisjon for optimal signalstyrke. 

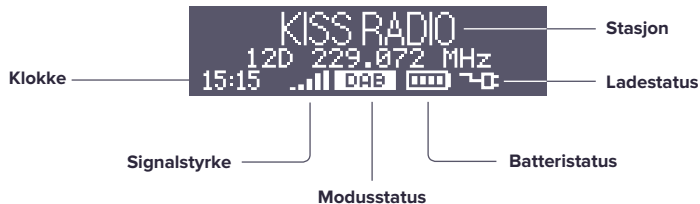

Oversikt

MODE / MENU

DAB/FM/Bluetooth
(kort trykk)

MENY

(langt trykk i 2 sek.)

Volum

Dreieknapp

Favoritt / Tilbake

Vis favorittliste
(kort trykk)

Lagre favorittkanal
(langt trykk i 2 sek.)

Gå tilbake i meny
(kort trykk)

Venstre

Flytt opp i meny (kort trykk)

Forrige kanal (kort trykk)

Forrige sang (kort trykk)

Søke nye kanaler (langt trykk i 2 sek.)

 
Høyre

Flytt ned i meny (kort trykk)

Neste kanal (kort trykk)

Neste sang (kort trykk)

Søke nye kanaler (langt trykk i 2 sek.)

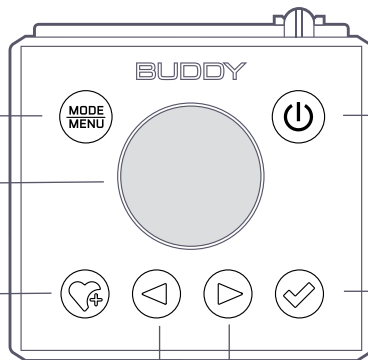

Slå på

Langt trykk

Hvilemodus

Kort trykk

Slå av

Langt trykk i 2 sek.

Velge / Enter

Velge i meny (kort trykk)


For DAB og FM-modus:

 
Spill av valgt kanal
(kort trykk)

For Bluetooth-modus:

Frakobling -
(langt trykk i 2 sek.)
Play / Pause (kort trykk)

DAB-Radio

Nye DAB-kanaler kan fortløpende bli gjort tilgjengelig av kringkaster, eller utvalget av kanaler kan endres om du flytter radioen til et annet sted. Det anbefales derfor å gjennomføre et søk etter nye DAB-kanaler med jevne mellomrom. Dette gjør du ved å trykke inn  knappen i 2 sekunder.

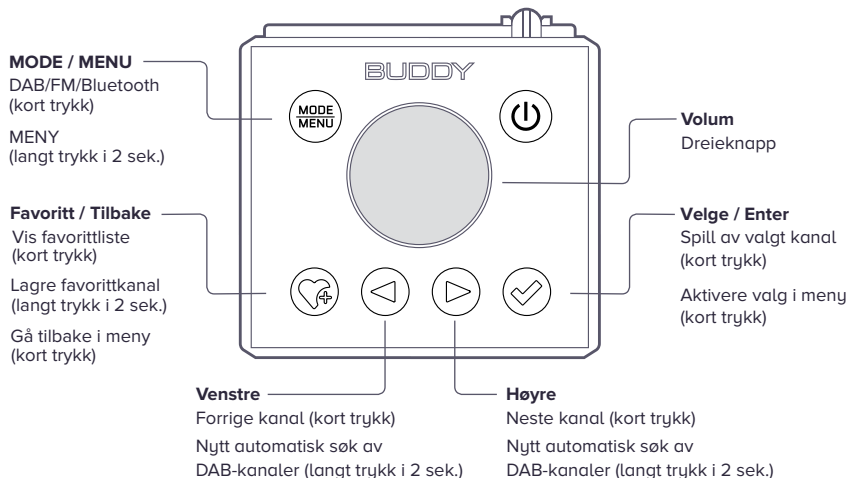

1 Bytt til DAB-modus



2 Velge kanal




3 Søke nye DAB kanaler







4 Lagre favorittkanal



Favorittkanaler vises med et  symbol.



5 Velg favorittkanal

- a) Kort trykk på  for å vise favorittliste.
- b) Velg kanal med  eller  og trykk  for å lytte til kanalen.
-

6 Fjern favorittkanal

Velg kanalen du vil fjerne (se punkt 2 på forrige side).

Langt trykk (2 sek.) på  fjerner kanalen fra favorittlisten.

 


7 Slett favorittliste

- a) Kort trykk på  viser favorittlisten.
- b) Bla ned med  til «**SLETT ALLE**»
- c) Trykk deretter  →  →  for å slette favorittlisten.

FM-Radio

Alle tilgjengelige FM-radio kanaler lagres automatisk første gangen du starter radioen. Du kan enkelt velge forrige eller neste kanal. Et langt trykk på venstre eller høyre piltast for å søke etter nye FM-kanaler. Det anbefales å gjøre et nytt søk om du flytter radioen til et nytt område.

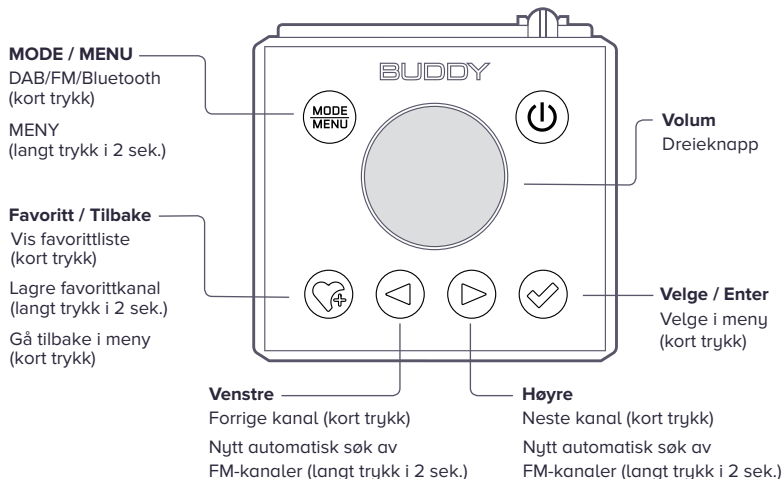

1 Bytt til FM-modus

Kort trykk på  → 

2 Bytte av kanal

Kort trykk på  eller  for å bytte kanal.

3 Søke etter nye FM kanaler

Langt trykk (2 sek.) på  eller  for å søke etter nye FM kanaler.





4 Lagre favorittkanaler

Langt trykk (2 sek.) på  lagrer kanalen i favorittlisten (opptil 10 stykker).


Favorittkanaler vises med et  symbol.



5 Lytt til favorittkanal

- a) Kort trykk på  for å vise favorittliste.
- b) Velg med  eller  og trykk  for å lytte til kanalen.
-

6 Slett favorittkanal

- a) Velg kanalen du vil slette (se punkt 2 på forrige side).
- b) Langt trykk (2 sek.) på  sletter kanalen fra favorittlisten.



 
7 Slett favorittlisten

- a) Kort trykk på  viser favorittlisten.
- b) Bla ned med  til «**SLETT ALLE**»
- c) Trykk deretter  →  →  for å slette favorittlisten.

Bluetooth

Med Bluetooth kan musikk og lyd sendes trådløst til din BUDDY DAB fra smarttelefoner, nettbrett og annet elektronisk utstyr.

Den trådløse rekkevidden strekker seg opptil 10 meter i friluft og kan variere innendørs.

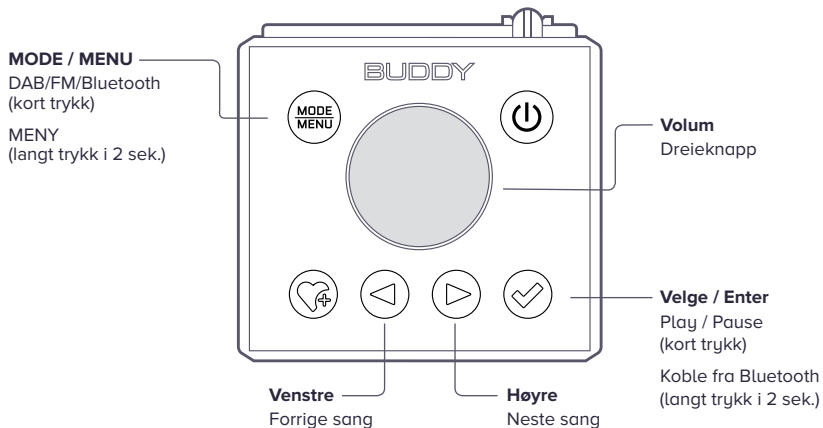

1 Bytt til Bluetooth-modus



2 Koble til en Bluetooth enhet



Bruk en Bluetooth enhet (f. eks. en smarttelefon) og søk etter «BUDDY DAB»



 
3 Koble fra en Bluetooth enhet



Langt trykk (2 sek.) på  kobler fra en tilkoblet bluetooth enhet.

Music in

Du kan koble din musikkspiller (f. eks. mobiltelefon) til Buddy DAB for å lytte til din favorittmusikk via radioens høyttaler. Bruk lyd-kabelen du finner i boksen med tilbehør. Buddy DAB skifter automatisk til Music in når du kobler til kabelen.

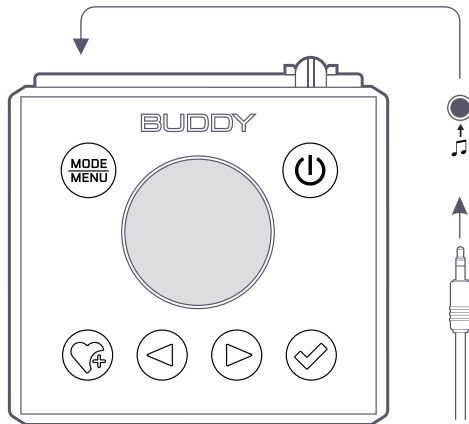

1 Bytt til Music in-modus

Sett inn lydkabelen



Buddy DAB vil automatisk
bytte til Music in-modus når du
kobler til en 3.5mm kabel.



Alarm

1 Aktiver alarm

- a) Langt trykk i 2 sek. på . Trykk  og velg **alarm** med 
- b) Velg **alarm 1** eller **2** med  og trykk 
- c) Velg **On** med  og trykk 
- d) Sett timer med  eller  og trykk 
- e) Sett minutter med  eller  og trykk 
- f) Velg hvilke dager alarmen skal gjelde med  eller  og trykk 
- g) Velg type alarm (Buzzer, DAB eller FM) med  eller  og trykk 
- h) Velg alarmvolum (1 - 32) med  eller  og trykk 

Når du velger volum vil du høre en pipetone som indikerer valgt volum.

Alarmen er nå ferdig satt opp, og vil aktiveres på angitt tidspunkt.

2 Sette snooze tid

Når en alarm går har du mulighet til å utsette (snooze) neste alarm. Snooze er satt til 10 minutter som standard, og kan settes fra 2 - 30 minutter.

- a) Langt trykk i 2 sek. på . Trykk  og velg **alarm** med 
 - b) Velg **Set snooze** ved å trykke  og trykk deretter 
 - c) Endre snoozetid med  eller  og trykk 
-



3 Deaktivere alarm

- a) Langt trykk (2 sek.) på . Trykk  og velg **alarm** med 
- b) Velg **alarm 1** eller **2** med  og trykk 
- c) Velg **Off** med  og trykk 

4 Håndtering av utløst alarm



Når en alarm går kan du velge mellom fortsette å lytte til DAB/FM, eller du kan utsette alarmen (snooze).



- a) Trykk  for å utsette alarm (Snooze) i angitt tid (Se steg 2 på forrige side)
 - b) Trykk  for å fortsette å lytte til radio.
-

Velger du «buzzer» som alarm kan du velge mellom å skru alarmen av eller utsette alarmen (snooze).








- a) Trykk  for å utsette alarm (Snooze) i angitt tid (Se steg 2 på forrige side)
- b) Trykk  for å avslutte alarmen.








Systemmeny

1 Søke nye DAB/FM kanaler

Utvalget av DAB/FM kanaler kan ofte endre seg. Vi anbefaler derfor jevnlig å gjøre et nytt søk. Dette gjelder også om du flytter radioen til et nytt område.


- a) Langt trykk (2 sek.) på . Bla ned til **Full skann** med  og trykk .
 - b) Velg **fortsette** med  og trykk  for å starte kanalsøket.
-

2 Velg språk



- a) Langt trykk (2 sek.) på . Bla ned med  og velg **System** med .
- b) Bla ned med , velg **språk** og trykk .
- c) Velg ønsket språk med  og trykk .



3 Skjerminnstillinger

a) Langt trykk (2 sek.) på . Bla ned med  og velg **System** med 




b) Velg **display** og trykk . Her kan du stille **Timeout** eller **Lysstyrke**.

Timeout: Velg **Timeout** med  og velg hvor lang tid det tar før skjermen skal slukkes med  og trykk . Som standard er dette satt til 2 minutter.

Lysstyrke: Velg **Lysstyrke** med  og trykk .

Velg mellom lav, medium eller høy lysstyrke med  og trykk 

4 Aktivere hvilemodus

a) Langt trykk (2 sek.) på . Bla ned med  og velg **Hvile** med 

b) Velg 15, 30, 45, 60 eller 75 minutter med  og trykk 

 
Radioen vil nå skru seg av automatisk etter angitt tid.

5 Nullstilling

Om du vil nullstille alle innstillingene på din Buddy DAB kan du enten gjøre det i system menyen, eller via RESET knappen på baksiden av Buddy DAB.

- Langt trykk (2 sek.) på . Bla ned med  og velg **System** med .
- Velg **Factory reset** og trykk .
- Trykk  og velg **Continue** og trykk .

Trykk inn RESET knappen med en kulepenn, binders etc. for å nullstille.

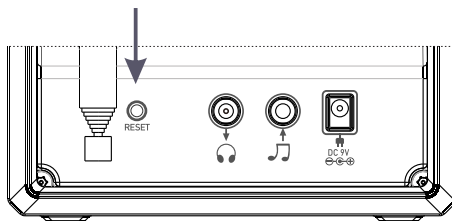

Litt info

Dette er DAB:

Digital kringkastingsteknologi er utviklet i Europa. Digital radio gir plass til langt flere kanaler enn dagens FM. Både DAB og FM er kringkastet lyd som tas imot via signaler i luften, så man trenger ikke internett-tilknytning.

Dette er FM:

Det kalles FM-båndet fordi hensikten er at man kun sender radio foni via FM (frekvensmodulasjon). 11. januar 2017 begynner FM-slukkingen av riksdekkende radiokanaler i Norge.

Dette er Bluetooth:

Med Bluetooth-teknologi kan musikk og lyd sendes trådløst til din BUDDY DAB fra smarttelefoner, nettbrett og annet elektronisk utstyr. Trådløs rekkevidde kan strekke seg opptil 10 meter i friluft og kan variere innendørs.

Informasjon fra www.radio.no

Om det er noe du lurer på angående DAB vil du på www.radio.no finne oversikt over tilgjengelig radiokanaler, dekningskart og mye annen nyttig informasjon.

Fakta om denne radioen

Radioen gir deg muligheter til å spille følgende: DAB, FM, og trådløst via Bluetooth.

Radioen er designet og utviklet i Norge av Jensen of Scandinavia. Vi har satt høye krav til lyd, konstruksjon og brukeropplevelse.

Innholdet i esken

BUDDY DAB, fjernkontroll, lyd kabel, strømadapter og bruksanvisning.

Om batteriet

Buddy DAB har en spesiellaget batteri-løsning som vil kunne gi opptil 24 timer * batteritid.

Det er innebygget en intelligent batterihandtering som sørger for å ikke lade batteriet når den har blitt fulladet. Det er trygt å la laderen stå tilkoblet.

Det vil ta kun fire timer å lade batteriet fra 0% til 70%. For å oppnå lengst mulig holdbarhet på batteriet vil de siste 30% bruke lengre tid.

Totalt vil det ta ca. 12 timer å lade fra 0% til 100%.

Robust radio

Buddy DAB er laget for å kunne taes med utendørs. Med den ytre gummi og vannavstøtende kabinett vil Buddy DAB kunne tåle å være under vann opptil 5 min i ca 20 cm dybde. Ta den gjerne med på standen og skyll av støv, sand osv. så det ikke ligger på høytaller elementet i lengre tid.

* Batteritiden vil variere etter volum, bruk og type musikk. 24 timer er basert på 40% volum.

Sikkerhet

 
Dette produktet inneholder ingen utskiftbare eller reparerbare deler. Vi anbefaler ikke inngrep eller åpning av produktet, det kan ha risiko for elektrisk støt. For optimal lyd kvalitet, benytt radioen ved temperaturer mellom +5°C og +40°C.

ADVARSEL: Vær forsiktig med å skru volumet for høyt, da dette kan medføre hørselsskade.


Strømforsyning:

Inngang: 100–240V ~ 50–60 Hz 1.0A

Utgang: 9V DC 2000 mA



 THANK YOU FOR CHOOSING
JENSEN OF SCANDINAVIA

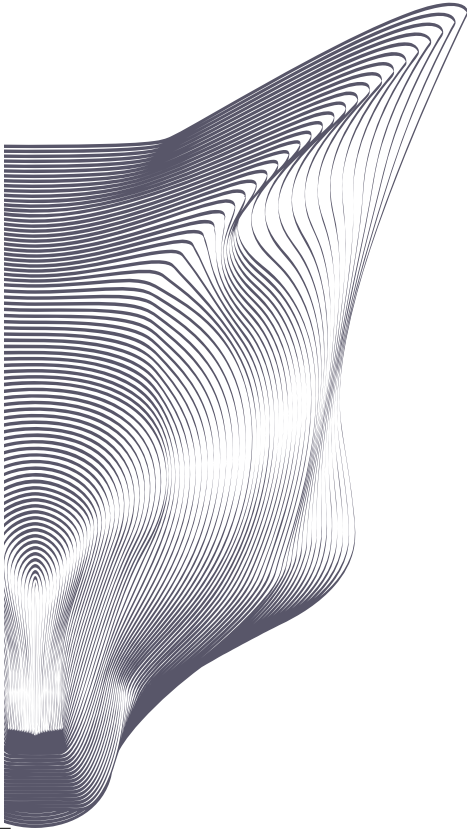


At Jensen of Scandinavia satisfied customers mean everything to us. We are therefore constantly seeking knowledge in order to meet the requirements and wishes of our customers.

Our goal is to be the obvious first choice, the best provider of customer service and offer products that are easy to use.

 We would like to take this opportunity to once again thank you for choosing our product!




Best Regards
Jensen of Scandinavia




Contents

Getting started	35
DAB Radio	37
FM Radio	40
Bluetooth	43
Music-in	45
Alarm	47
System menu	50
A bit of info	53
About the battery	55
Safety	56

Getting started

 Use the enclosed power adapter and connect the power cable.
Extend the antenna all the way out to get the best signal reception.
Long press  to turn on the radio. Select your language using 
and click . The radio will then automatically scan for available
DAB radio stations. Adjust the antenna position for optimal signal strength.

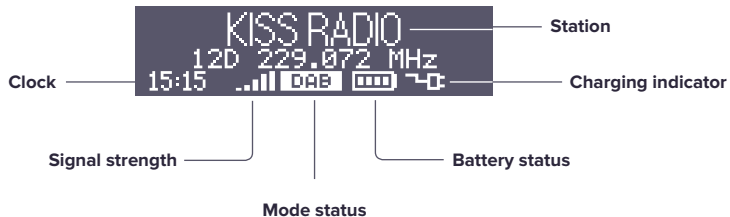

Overview

MODE / MENU

DAB/FM/Bluetooth
(short press)

MENU
(long press - 2 sec.)

Volume
Dial

Favourite / Back

Show favourites
(short press)

Save as favourite
(long press - 2 sec.)

Go back in menu
(short press)

Left

Scroll up in menu (short press)

Previous channel (short press)

Channel search (long press - 2 sec.)

Previous song (short press)

Right

Scroll down in menu (short press)

Next channel (short press)

Channel search (long press - 2 sec.)

Next song (short press)

Power on

Long press

Standby

Short press

Power off

 
Long press - 2 sec.

Select


Activate menu selection

In DAB or FM mode:
Play selected channel

In Bluetooth mode:
Disconnect
(long press - 2 sec.)
Play / Pause (short press)

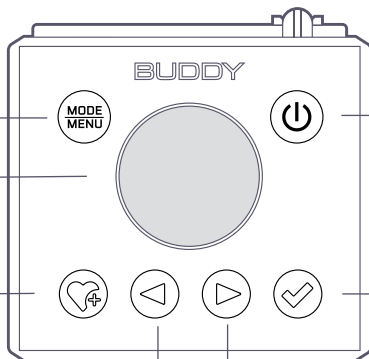

DAB Radio

If some DAB channels are missing or the radio has been moved to a new location, we recommend to do a search for new DAB channels by pressing the  button for 2 seconds. New DAB channels may be made available from time to time. We recommend that you search for new DAB channels on a regular basis.

MODE / MENU

DAB/FM/Bluetooth
(short press)

MENU

 
(long press - 2 sec.)

Favourite / Back

Show favourites
(short press)

Save as favourite
(long press - 2 sec.)

Go back in menu
(short press)

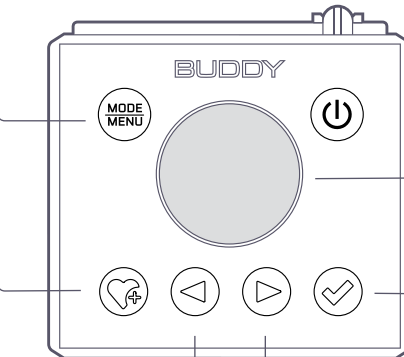

Volume

Dial

Select / Enter

Activate menu
selection

In DAB mode:

Play selected channel

Left

Previous channel (short press)
Search for new DAB channels
(long press - 2 sec.)

Right


Next channel (short press)
Search for new DAB channels
(long press - 2 sec.)

1 Switch to DAB radio mode


Short press on  until DAB mode selected



2 Switch radio channel


Short press  or  to select a radio channel and then click 

3 Scan for new DAB channels

Long press (2 sec.) on  or  to start scan for new DAB/DAB+ channels





4 Save favourite radio channel

Short press  to store a radio channel as an favourite channel (Preset 1-10)


A favourite channel is shown with a  symbol



5 Listen to favourite radio channel






- a) Short press  to show the list of favourite radio channels.
- b) Short press on  or  and push  to listen to the radio channel.
-

6 Delete a favourite radio channel

- a) Select the radio channel you want to delete from favourites (see step 2).
- b) Long press (2 sec.)  deletes the radio channel from the favourite list.

 


7 Delete the favourite list

- a) Short press  to show the favourite list.
- b) Scroll down using  until «DELETE ALL» is shown.
- c) Click  →  →  to delete the list.

FM Radio

All FM stations will be scanned and stored on first time use. You can easily select between the FM stations with the left or right buttons. A long press on the left or right button will make the radio scan for new FM channels. We recommend that you do a new channel search if you move the radio to a new location.

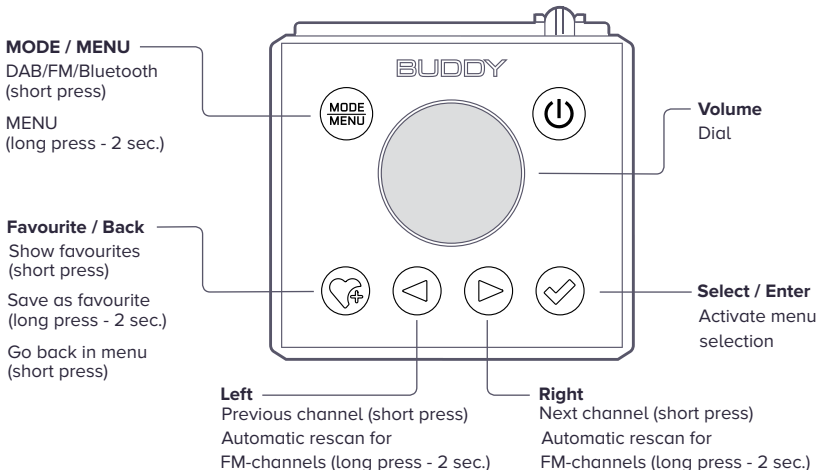

1 Switch to FM-mode

Short press on  until FM mode selected



2 Switch radio channel


Short press on  or  to switch radio channel.

3 Scan for new FM channels

Long press (2 sec.) on  or  to start scan for new FM channels





4 Store favourite radio channel

Short press  stores radio channel automatically (Preset 1-10)


A favourite channel is shown with a  symbol



5 Play favourite radio channel





- Short press  to see the favourite list.
 - Select channel using  or  and click  to start play.
-

6 Delete favourite radio channel

- Select the radio channel you want to delete from favourites (see step 2).
- Long press (2sec.)  deletes the radio channel from the favourite list.

 


7 Delete favourite list

- Short press  to show the favourite list.
- Scroll down using  until «**DELETE ALL**» is shown.
- Click  →  →  to delete the list.

Bluetooth

Bluetooth technology enables music and sound to be sent wirelessly to your BUDDY DAB from smart phones, tablets and other electronic equipment. The wireless range extends up to 10 meters in the open air, but can vary a little indoors.

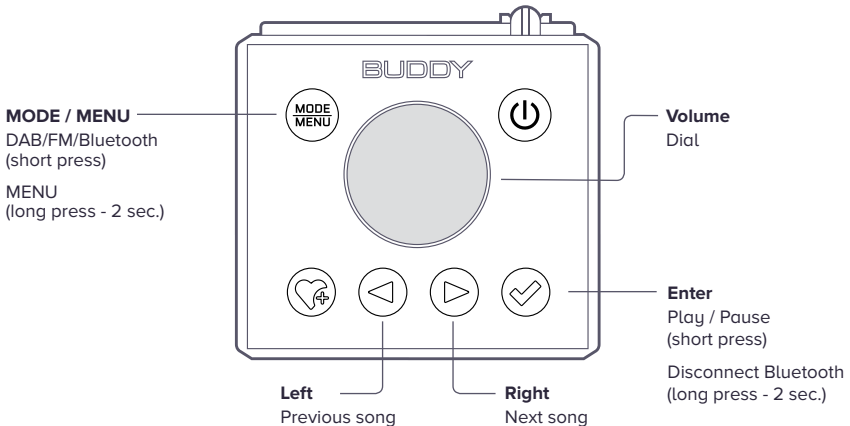

1 Switch to Bluetooth mode

Short press  until Bluetooth mode selected



2 Connect a Bluetooth device




Use any Bluetooth device and search for «BUDDY DAB»



 
3 Disconnect bluetooth device



Long press (2 sec.) on  to disconnect a connected bluetooth device.

Music in

You can connect any audio player to your Buddy DAB. Use the audiocable which you will find in the box of accessories. The radio will automatically switch to “Music in” mode when you connect it.

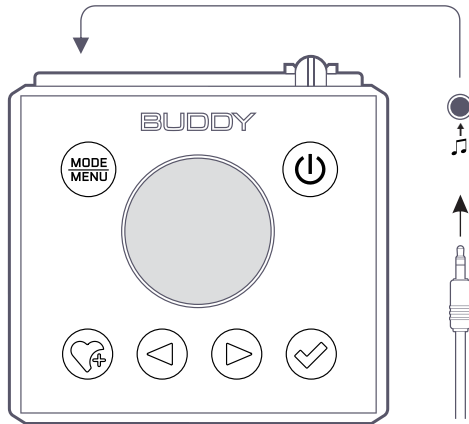

1 Switch to Music in mode

Insert audio cable

























Buddy DAB will automatically switch to «Music in» mode when you insert a 3.5mm cable.



Alarm

1 Activate alarm

- a) Long press (2 sec.) on . Scroll down to **alarm** using  and press 
- b) Select **alarm 1** or **2** using  and press 
- c) Select **On** using  and press 
- d) Set hour using  or  and press 
- e) Set minutes using  or  and press 
- f) Select alarm period using  or  and press 
- g) Select alarm type (Buzzer, DAB or FM) using  or  and press 
- h) Set alarm volume using  or  and press 



When setting volume you will hear a «biip» to indicate alarm volume.

The alarm is now configured.

4 Handle triggered alarm



When an alarm is triggered you can select to continue listen to DAB/FM, or snooze the alarm.



- a) Click  to snooze the alarm for the amount of time set.
 - b) Click  to continue listen to DAB/FM radio.
-

If you select «buzzer» as alarm you can select to snooze or cancel the alarm.




- a) Click  to snooze the alarm for the amount of time set.
- b) Click  to cancel the alarm.

2 Set snooze time

When an alarm is triggered you can select to snooze.

Snooze time is set to 10 minutes as default and can be set from 2 - 30 min.

- Long press (2 sec.) on . Press  to select **alarm** and click 
 - Select **Set snooze** by press  and then click 
 - Set snooze time using  or  and click 
-

3 Deactive alarm (alarm off)

- Long press (2 sec.) on . Press  to select **alarm** and click 
- Select **alarm 1** or **2** using  and click 
- Select **Off** using  and click 








System menu

1 Search for new DAB+/FM channels












The selection of DAB+/FM channels can often change. We recommend that you search for new channels on a regular basis. Also do this if you move the radio to a new area.

- a) Long press (2 sec.) . Scroll down  and select **Full Scan** using .
 - b) Scroll down  to **Continue** and press  to start the scanning.
-






2 Select language

- a) Long press (2 sec.) . Scroll down to **System** using  and click .
- b) Scroll down to **Language** using  and click .
- c) Select language using  and click .

3 Screen settings

- a) Long press (2 sec.) on . Scroll down  to **System** and press .
- b) Select **display** and press . Here you can set Timeout and Brightness.
- c) **Timeout:** Select **Timeout** using . Select the screen timeout interval using  and press .
- d) **Brightness:** Select **Brightness** using  and press .
- Select the brightness level (low, medium or high) using  and press .
-






4 Activate sleep mode

- a) Long press (2 sec.) on . Scroll down  and select **Slepp** using .
- b) Select between 15, 30, 45, 60 or 75 minutes using  and press .

 
The radio will now turn itself off after the selected time period.

5 Reset

If you want to reset your Buddy DAB to factory default settings you either do it from the system menu, or using the RESET button on the back of Buddy DAB.

- Long press (2 sec.) on . Scroll down  to **System** and press .
- Select **Factory reset** and press .
- Press , select **Continue** and then press .

To reset the Buddy DAB press the RESET button using paperclip etc.

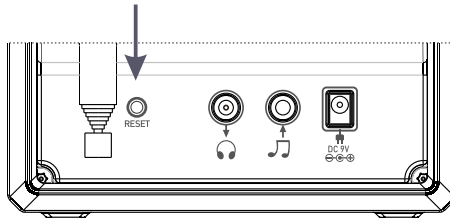

A bit of info

DAB:

DAB is digital broadcasting technology that has been developed in Europe. Digital radio creates space for a much greater number of stations than present day FM radio. Both DAB and FM broadcast sound over the air, so an Internet connection is not necessary.

FM:

The FM band is so called because the aim is to transmit radio phonic signals using FM (frequency modulation). On the 11th of January 2017, Norway will start switching off the national FM radio stations.

Bluetooth:

Bluetooth technology enables music and sound to be sent wirelessly to your BUDDY DAB from smart phones, tablets and other electronic equipment. The wireless range extends up to 10 metres in the open air, but may vary indoors.

Information from www.radio.no:

If you have some questions about DAB+ you can go to www.radio.no
Here you will find a list of available radio channels, coverage map and other useful information.

About this radio:

This radio gives you the opportunity to play the following sources: DAB, FM and wireless via Bluetooth.

This radio has been designed and developed in Norway by -
Jensen of Scandinavia. We have specified high demands in respect to:
sound , design and users experience.

Box contents:

Buddy DAB, remote control, 3.5mm AUX cable, power adapter and user manual

About the battery

Buddy DAB comes with a custom battery solution which will provide up to 24 hours (*) batterytime.

The built in intelligent battery management will make sure that it stops charging and only provide power directly to the radio.

When battery is completely empty you can reach 70% within four hours of charging. For longer lifespan the remaining 30% will take longer time to charge. In total it will take 12 hours to charge from 0% till 100%.

Durable radio

Buddy DAB is a durable radio made to handle both indoor and outdoor usage. The combination of outer rubber and waterproof enclosure makes it withstand water to leak inside the radio. It can handle 5 min under water and about 20cm depth. This makes it perfect to bring along activety on beach, hiking or shower/ bathroom enviroment.

*Battery life will vary based on volume, usage and type of music. 24 hour is based on 50% volume.

Safety

This product does not contain any user replaceable or repairable parts. Opening of this product by a non qualified engineer can risk electric shock.

In order to obtain optimal sound quality, use the radio at a temperature of between +5°C and +40°C.

WARNING: To avoid hearing damage, use a moderate volume level.

In order to prevent any possible damage to your hearing, we recommend that you should not listen to it for long periods of time with the volume turned up high.

Power supply:

Input: 100-240V ~ 50-60 Hz 1.0A

 
Output: 9V DC 2000 mA

**This equipment may be sold
in all EU and EFTA countries:**
AT, BE, BG, CY, CZ, DK, EE, FI,
FR, DE, GR, HU, IS, IE, IT, LV, LI,
LT, LU, MT, NL, NO, PL, PT,
RO, SK, SI, ES, SE, CH, TR, BG

Jensen®
OF SCANDINAVIA

www.jensenofscandinavia.com



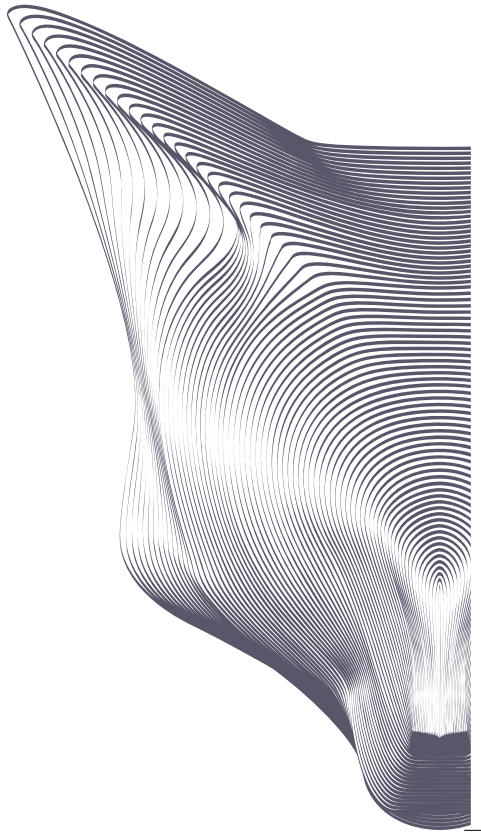

Jensen[®]
OF SCANDINAVIA

